

Mixer Settings for SHS Band Room

Connect powered speakers
To Main Out

Plug mics in Bal/Unbal
Starting with mic 1

Plug RCA cables in
Tape Output to connect
To Computer input



Low cut button
Should be UP

These controls
are not used

These controls
are used to control
Feedback if needed

PAN is used to control
if this mic is in left or
right channel

The fader (slider)
is used to control the
volume of this mic

SOLO PFL
should be UP



Use these controls to adjust the
Starting volume of each mic

MUTE
should be UP

1 - 2
should be DOWN

3 - 4
should be UP

All other controls are not used.

Equalizer can change the balance of the frequencies of the music

Phantom Power should be DOWN

BREAK SWITCH should be UP

Lights indicate how loud each channel is

Main mix is used to control all the volume for powered speakers

Sub 2 is used to control the volume of the right channel



Sub 3 & 4 are not used

SUB 2
•Left should be UP
•Right should be DOWN

SUB 1
•Left should be DOWN
•Right should be UP

Sub 1 is used to control the volume of the left channel

Audiophile 2496

